

EXP_d

Installation – Commissioning – Maintenance

20161012

Commissioning

Adjust the air flow on the measuring damper placed in the duct system.

Maintenance

When necessary clean the extract air diffuser with luke-warm water and detergent. Alternatively, use a vacuum cleaner with a brush nozzle when cleaning. The ducting system/suspended ceiling is accessed by simply lifting the extract air diffuser from the suspended ceiling system.

Installation

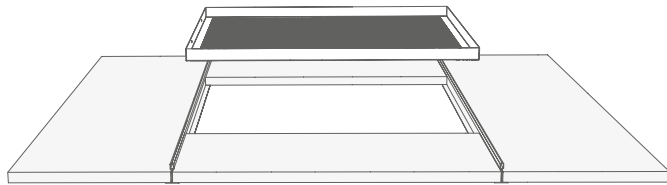


Figure 1. Installation.



Figure 2. Installation.

Dimensions and weights

Description	Size	Weight (kg)	Free area (m ²)
EXP 600-C	593x593	1.98	25%
EXP 600-R1	593x593	1.19	54%
EXP 600-R2	593x593	1.44	35%

 


Figure 3. Dimensions.