


Installation instructions for the CARE-1-01 Electric Air Heater COMPACT 02-03

Install the electric heater in the space below the supply fan.

1. Remove the insulation and the safety guard from the supply air fan..
2. Dismantle the supply air fan by backing off the two screws in the rear part of the suspension bracket of the supply air fan. Do not unscrew them completely. Unscrew and remove the screws in the front part of the suspension bracket. Withdraw the entire fan package. The suspension bracket will then let go from the rear screws.
3. Slightly turn the fan package and withdraw it from the air handling unit.
4. Remove the two screws located on each side of the intake to the underside of the air handling unit, intended for installing an air heater.
5. Lower the electric air heater so that the electric heating rods will be positioned in the lower section of the air handling unit as shown in the illustration and secure the electric air heater by means of screws.
6. Arrange the power and communication cable in the existing cable trunking, run it to the terminals in the intermediate level partition and connect the leads.

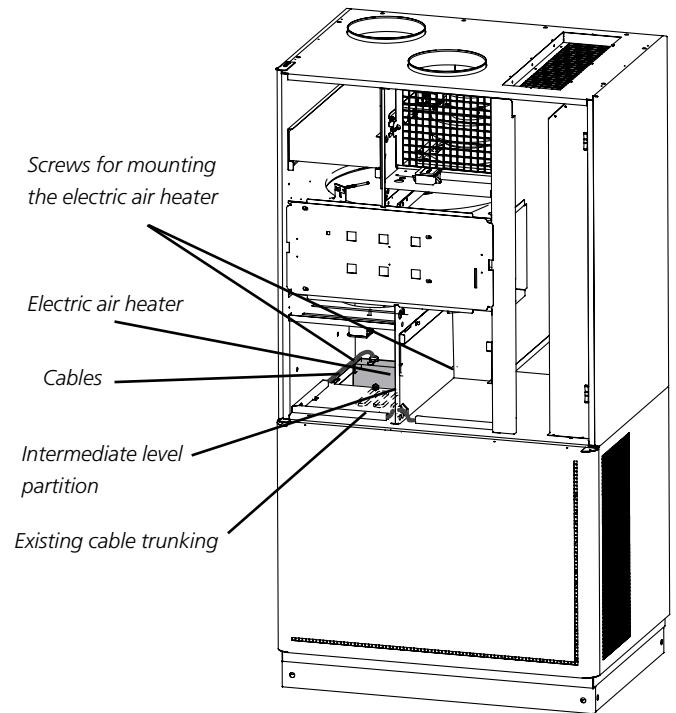

Air handling unit viewed from the side.

